

DC POWER CEILING FAN REMOTE CONTROL MANUAL

LEARNING PROCESS

NOTE: The Hand Held Remote Control is equipped with a learning frequency function which has code combinations to prevent potential interference from other remote units.

Step: 1. Install the DC12V battery in transmitter. Within 30 seconds of turning the Receiver AC power ON, touch the transmitter "⏻" icon.

Step: 2. Touch ⏻ about 5 seconds, once the receiver has detected the frequency, the receiver will make sound, Bi Bi, twice. This will indicate the receiver has learned the frequency that was previously selected on the transmitter.

Note: After the AC power is on, do not touch any other icons on the transmitter before touching ⏻ icon. Because doing so will cause the procedure to fail.

After completing the steps above, you should be able to operate the ceiling fan and light. If the ceiling fan is not responding to the transmitter, please turn the power off to the receiver and repeat step 1 and 2.

Remove the battery if not used for long periods of time to prevent damage to the hand held remote.

FUCNCTIONS OF TRANSMITTER

1. FAN :

- 1: Turn on ceiling fan at 1st speed (lowest speed)
2. Turn on ceiling fan at 2nd speed
3. Turn on ceiling fan at 3rd speed
4. Turn on ceiling fan at 4th speed
5. Turn on ceiling fan at 5th speed
6. Turn on ceiling fan at 6th speed (high speed)

⏻ : Turn off ceiling fan.

2. LIGHT:

💡 : Touch this icon and release instantly to turn on or off the light.

↻ : Touch icon for forward/reverse airflow of ceiling fan.

≈ : Touch icon for set fan speed for making natural wind.

5. FAN TIMER:

1hr: Setting up that the ceiling fan will turn off after 1 hour automatically.

3hr: Setting up that the ceiling fan will turn off after 3 hours automatically.

6hr: Setting up that the ceiling fan will turn off after 6 hours automatically.

6. Saving battery energy : When you do not want change ceiling fan function, you could touch

⏻ for turn off transmitter power. If you want to use transmitter to control ceiling fan, touch

⏻ for wake up transmitter.

